

Installation

Install the LX320 as shown in the below diagram. The LX320 is only work on standard analog phones. Do not install the dialer on digital type telephones. The LX320 is telephone line powered and has non-volatile memory so it will not lose its program when unplugged from the telephone line.

Model LX320-C1

Model LX320-C2



Connect to wall jack

Connect to telephone



Program register quick reference

Register	Register description	Valid entries	Default
01	Program Password	1234567890*,#1	54321*
02	Hook Flash Trigger Digit String	1234567890*,#1	empty
03	Flash Hook Interval in Milliseconds	50 - 9999	500
88	Restore default settings		
99	Exit programming		

Entering program mode

Lift the telephone handset dial the default programming password 54321*, you will hear one beep. You are now in program mode and can enter any valid program register. If you enter the password incorrectly you will have to hang the phone then lift the handset again and enter the program password again. To exit program mode dial 99 wait for beep and hang up. At any time you here 4 beeps this means a program entry was incorrect.

Programming semantics

When programming the LX320 use the following semantics: First you have to be in program, this is explained in section "Entering program mode".

1. Dial register number and you will hear 1 beep .
2. Dial program data.
3. Dial ## to save register entry and you will hear 2 beeps.

Example: 02 beep *1 ## beep beep. This programs the LX320 to generate a flash hook when *1 is dialed.

Special character entries

To program a # in a register you have to enter it as follows "#1"

Register 01 program password

With this register you can change the default program password.

Scenario: You want to change the password to 5*78*

How to:

- 01 beep
- 5*78*
- ## beep beep

Register 02 Hook Flash Trigger Digit String

When this register is programmed with a number the LX320 will send a hook flash when dialed number matches what is programmed in this register . Scenario: You want the LX320 to generate a hook flash when *1 is dialed.

How to:

- 02 beep
- *1
- ## beep beep

Register 03 Hook Flash Interval in milliseconds

Program the duration of hook flash that you require.

Scenario: You want hook flash duration of 750 milliseconds.

How to:

- 03 beep
- 750
- ## beep beep

Register 88 Restore default settings

With this register you can reload the LX320 default settings. Important: After you enter 88## you must wait for the 2 confirmation beeps. Do not hang up before hearing the 2 confirmation beeps, doing so may corrupt the LX320 memory.

How to:

- 88 beep
- ## beep beep

Register 99 Exit programming

Dialing 99 will exit program mode.